

SERIES HSC


Lista de piezas / Parts list / Liste des pieces

No	Description
001	Motor housing complete
002	Blower housing
005	Motor rotor
006	Parallel key
007	Deep groove ball bearing
008	Deep groove ball bearing
010	Bearing cover complete
011	O-ring
012	Washer
014	Screw
025	Screw
027	Impeller
029	Screw
030	Blower cover
033	O-ring
034	Flange
035	Flange
037	cap
042	Terminal box, complete
048	S-pipe
053	Screw
054	Gasket
055	Gasket
058	Lifting eye bolts
061	Square nut
062	Base
063	Screw
064	Spring lock washer
065	Sleeve
066	Screw
067	Spring lock washer
068	Washer

No	Description
069	Spring lock washer
072	Centre section
074	Screw
078	Washer
087	Blower cowl
095	Felt ring
096	Rotary shaft lip type seal
098	Screw
127	Washer
130	Filler
134	sleeve
142	Screw
168	Washer
403	Silencer housing
409	Nut
413	Silencer inset
423	net pipe
433	Gasket
444	Screw
450	End shield
451	Screw
452	Rotary shaft lip type seal
455	Spring strap
459	Mut
467	Spring lock washer
500	fan cowl
501	External fan
503	Screw
505	Parallel key
506	Retaining ring
670	capacitor
990	Silencer complete

SERIES HSC

Simple etapa Single stage Mono-étage

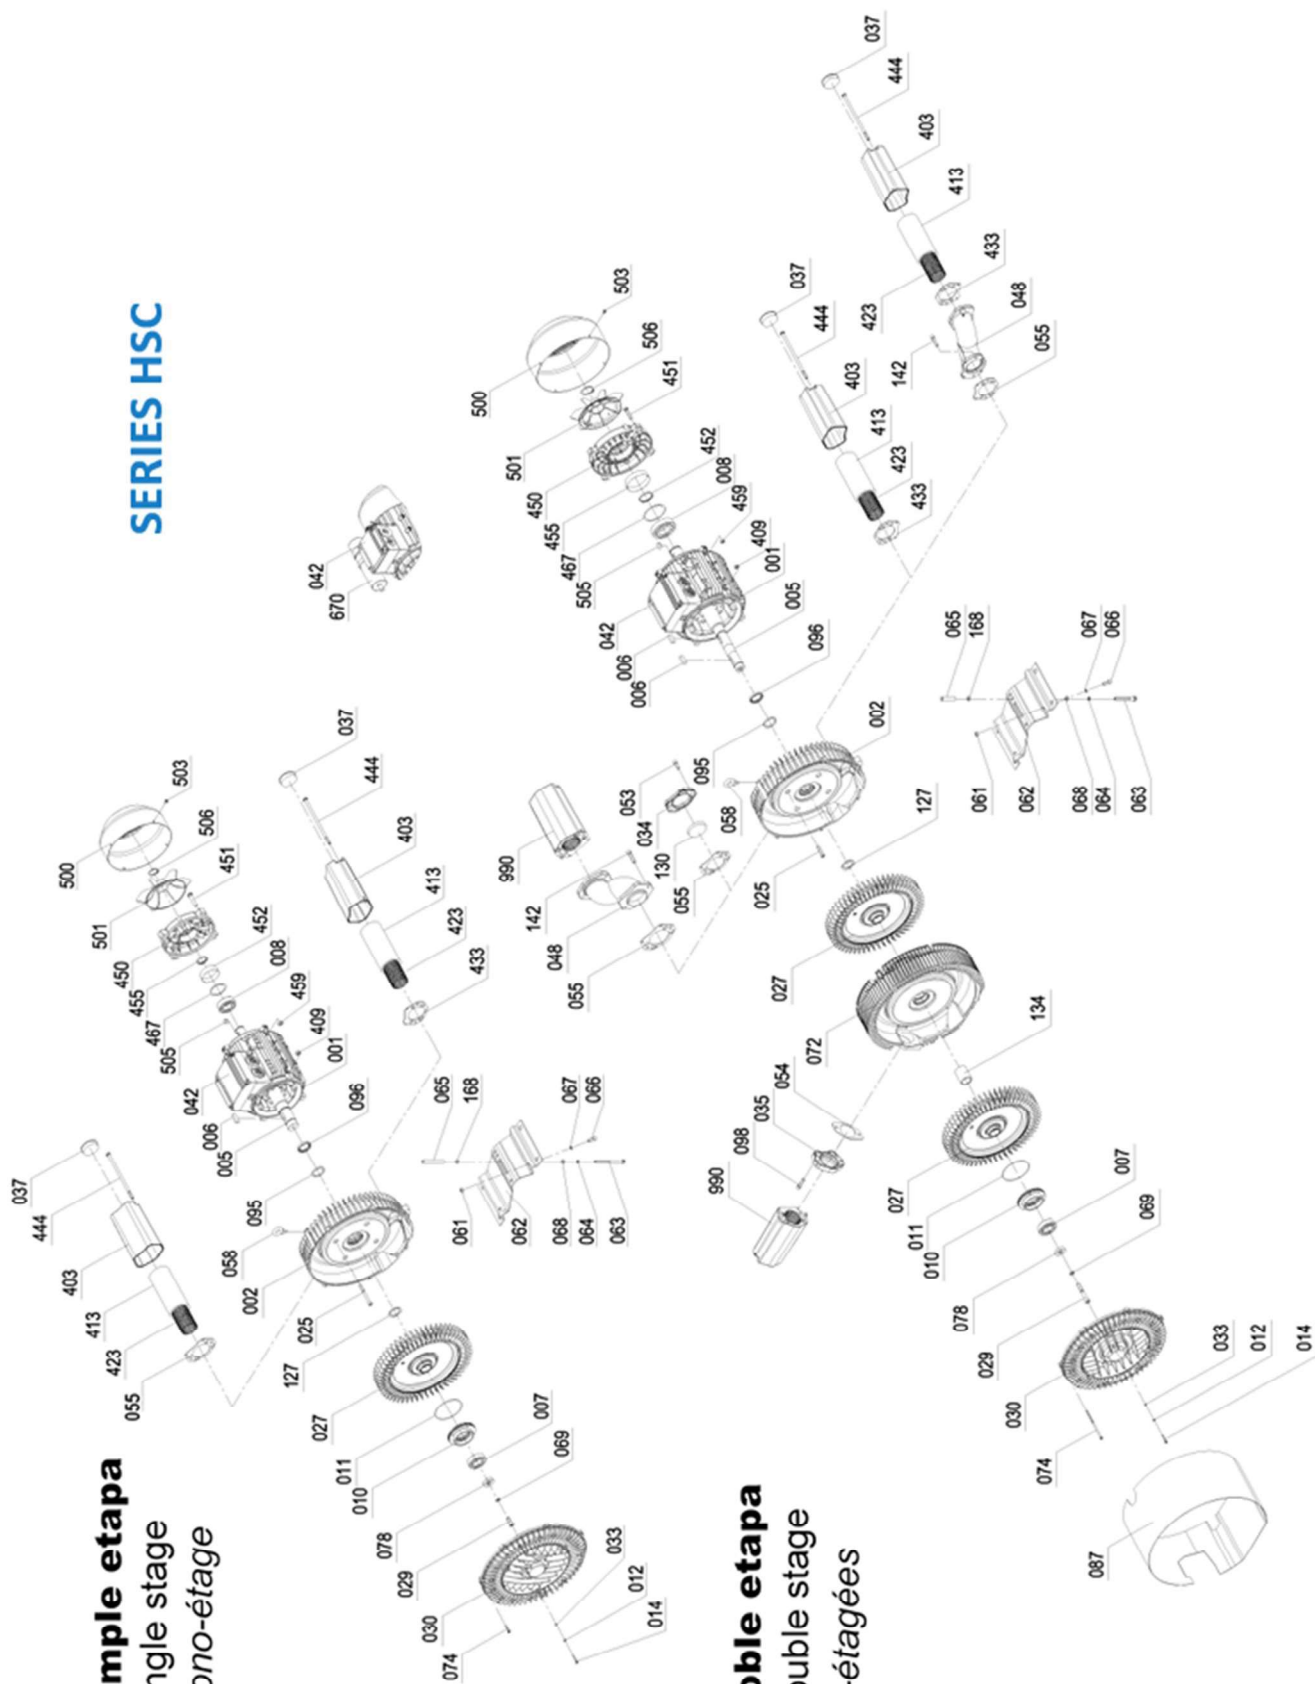

Doble etapa Double stage Bi-étagées

